


# HC33BS Boom Cymbal Stand <Discontinued>

Production from May, 2006 to Feb. 2015

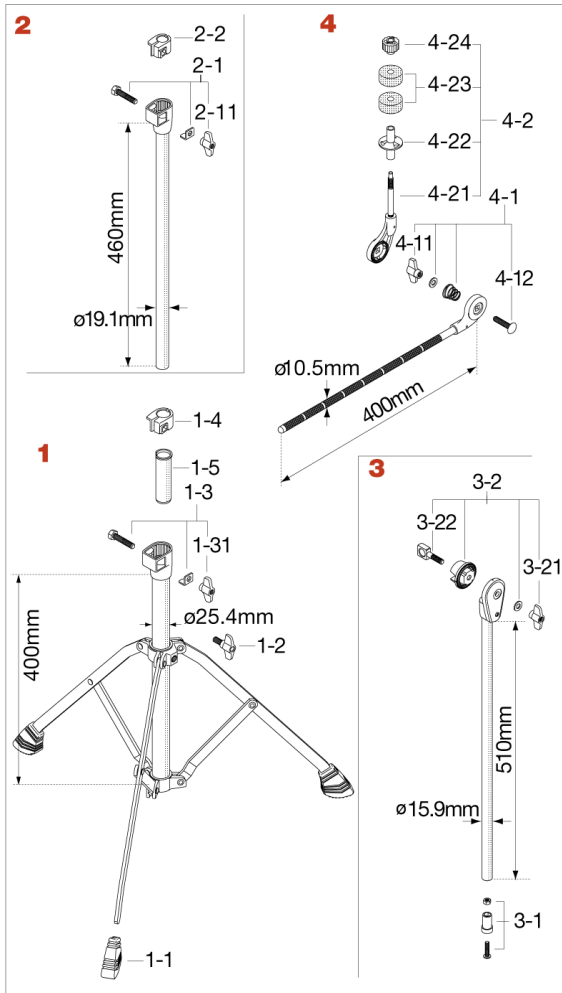

No.	Model No.	Substitutable Model No.	Description
<b>1</b>	HC32S1 (Discontinued)	HC42S1	Base assembly
1-1	RFDSP3 (Discontinued)	RFSP3	Rubber tip (3pcs/set) for single braced leg
1-2	TS816P		T-bolt (M8x16mm, 2pcs/set)
1-3	HB840WN8L		Bolt (M8x40mm), L-plate & nut assembly
1-31	WN8P		Wing nut (2pcs/set)
1-4	NB2219		Nylon bushing (25.4mm-19.1mm)
1-5	INS19N		Insert (Stabilizing) bushing (25.4mm-19.1mm)
<b>2</b>	HC32W2 (Discontinued)	HC42W2	Center tube assembly
2-1	HB840WN8L		Bolt (M8x40mm), L-plate, & nut assembly
2-11	WN8P		Wing nut (2pcs/set)
2-2	PB191H (Discontinued)	N/A	Nylon bushing (19.1mm-15.9mm)
<b>3</b>	HC33BW3 (Discontinued)	HC43BW3	Upper tube assembly
3-1	IRC15N (Discontinued)	N/A	Insert rubber cap assembly
3-2	HC33BW32		Boom tilter assembly
3-21	WN8P		Wing nut (2pcs/set)
3-22	EBA830		Eye bolt (M8x30mm)
<b>4</b>	HC33BW4 (Discontinued)	HC43BW4	Boom arm w/ tilter
4-1	B835WN8T		Bolt (M8x35mm), washer, spring & nut assembly
4-11	WN8P		Wing nut (2pcs/set)
4-12	B835		Bolt (M8x35mm)
4-2	CT33 (Discontinued)	CT33Q	Cymbal tilter assembly
4-21	CT331		Cymbal tilter only
4-22	RB8P		Cymbal bottom (2pcs/set)
4-23	7081P		Felt washer (2pcs/set)
4-24	CM8P		Cymbal mate (M8, 2pcs/set)