


# HC43BS Boom Cymbal Stand <Discontinued>

Production from Jan. 2017 to Oct. 2018

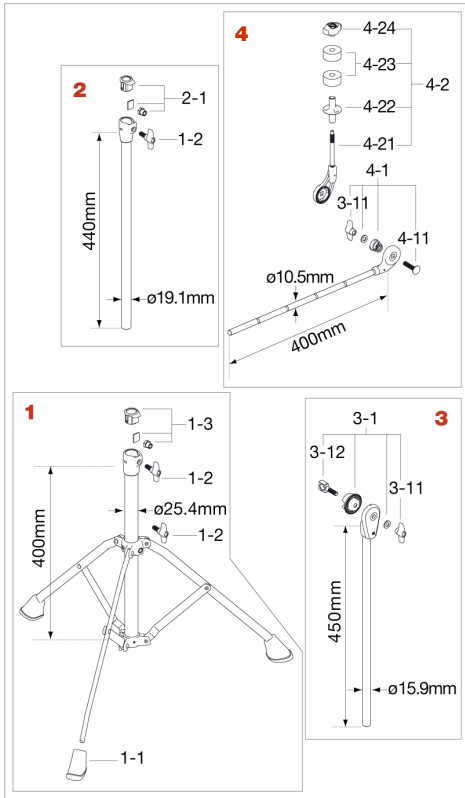

No.	Model No.	Description
<b>1</b>	HC42S1	<b>Base assembly</b>
1-1	RF3SP3	Rubber tip (3pcs/set) for single braced leg
1-2	TS816P	T-bolt (M8x16mm, 2pcs/set)
1-3	NB2519S4	Nylon bushing(25.4mm-19.1mm) , plate, & nut assembly
<b>2</b>	HC42W2	<b>Center tube assembly</b>
2-1	NB19115S4	Nylon bushing(19.1mm-15.9mm) , plate, & nut assembly
<b>3</b>	HC43BW3	<b>Upper tube assembly</b>
3-1	HC33BW32	Boom tilter assembly
3-11	WN8P	Wing nut (2pcs/set)
3-12	EBA830	Eye bolt (M8x30mm)
<b>4</b>	HC43BW4	<b>Upper rod w/ tilter</b>
4-1	B835WN8T	Bolt (M8x35mm), washer, spring & nut assembly
4-11	B835	Bolt (M8x35mm)
4-2	CT33Q	Cymbal tilter assembly
4-21	CT331	Cymbal tilter only
4-22	RB8P	Cymbal bottom (2pcs/set)
4-23	7081P	Felt washer (2pcs/set)
4-24	QC8	Quick set cymbal mate