


HC73BWN Boom Cymbal Stand <Discontinued>

Production from Nov. 2005 to May. 2009

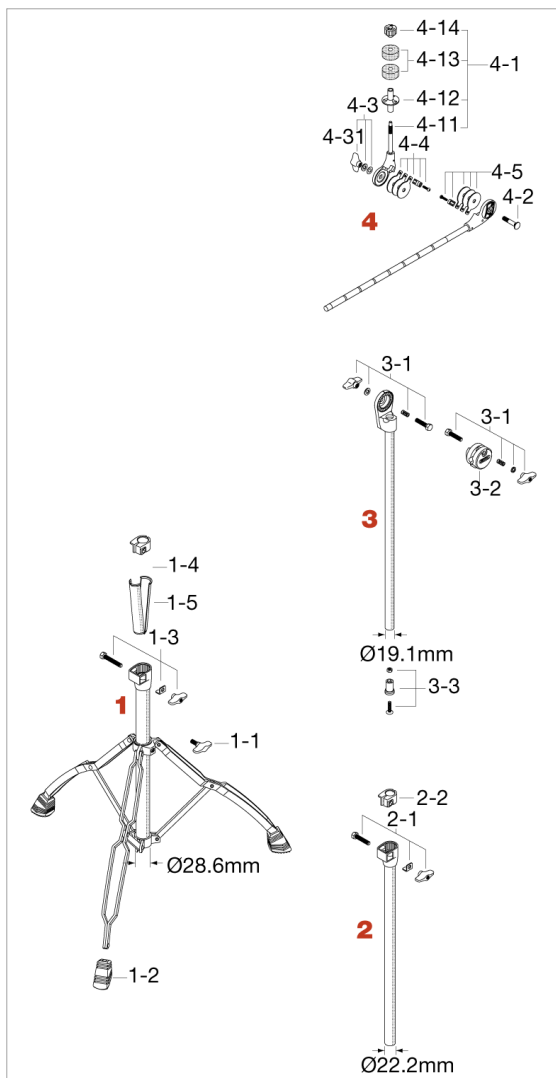

No.	Model No.	Substitutable Model No.	Description
1	HC72WN1 (Discontinued)	HC82W1	Base assembly
1-1	TS816P		T-bolt (M8x16mm, 2pcs/pack)
1-2	RF-WP3		Rubber tip (3pcs/pack)
1-3	HB850WN8L		Bolt (M8x50mm), L-plate, & nut assembly
1-4	NB2822		Nylon bushing (28.6mm-22.2mm)
1-5	INS22N (Discontinued)	N/A	Insert (stabilizing) bushing (28.6mm-22.2mm)
2	HC72W-2 (Discontinued)	HC82W2	Center tube assembly
2-1	HB840WN8L		Bolt (M8x40mm), L-plate, & nut assembly
2-2	NB2219		Nylon bushing (22.2mm-19.1mm)
3	HC73BW-3		Upper tube assembly
3-1	HB835WN8T		Bolt (M8x35mm), spring, washer & nut assembly
3-2	HC83B-33		Pressure casting
3-3	IRC19L		Insert rubber cap assembly (22.2mm-19.1mm)
4	MCB45EN		Boom arm (450mm)
4-1	CT44N		Cymbal tilter assembly
4-11	CT44-11N		Cymbal tilter only
4-12	RB8P		Cymbal bottom (2pcs/pack)
4-13	7081P		Felt washer (2pcs/pack)
4-14	CM8P		Fixing nut (M8, 2pcs/pack)
4-2	B840		Bolt (M8x40mm)
4-3	WN8WTW		T-nut (M8), washer, thin washer assembly
4-31	WN8P		Wing nut (M8, 2pcs/Pack)
4-4	CT44-FPC		Friction plates (Chrome), plate and bolt assembly
4-5	CT44-FPB (Discontinued)	CT44-FPC	Friction plates (Black), plate and bolt assembly